

**PART NUMBER****PFF85-802****DESCRIPTION****FRONT WISHBONE REAR BUSH****INSTALLATION GUIDE****Product description:**

This part replaces OEM part number 5Q0407183E.

**Contents (parts per pack):**

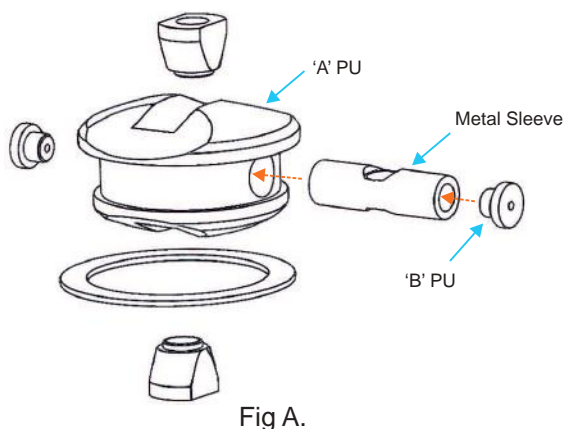
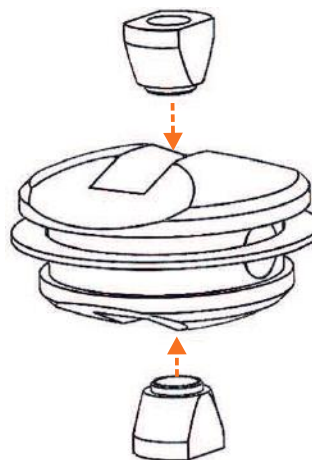
2 x 'A' PU, 2 x 'B' PU, 2 x Sleeves, 4 x Adapter pins, 2 washers, 1 x Grease

*Please read the complete fitting instructions and check package components before fitment.  
These fitting instructions are to be used as a guide and in conjunction with workshop manual.  
It is recommended that:*

- all work to be carried out by a licensed technician;
  - all safety precautions adhered to;
  - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.*

**Fitting Instructions:**

1. Remove the front wish bone from the car and push out the original bush from the arm.
2. Clean any dirt and corrosion from the bore the arm.
3. Apply some of the supplied grease into the bore of the 'A' PU. Insert the metal sleeve into the bore of the 'A' PU making sure the centre hole in the sleeve is visible from the voids of the PU. Use the 'B' PU to plug the side holes on the 'A' PU. Fig A.
4. Press the supplied washer into the 'A' PU. Fig B.
5. Fit the PU into the bore of the arm making sure to position the void as shown in Fig C.
6. Insert and locate the supplied adapter pins into the voids of the 'A' PU and the bore of the metal sleeve inside the PU. Fig C.
7. Fit back arm to the car. Tension all hardware to manufacturers recommended torque settings.

**Fig A.****Fig B.****Fig C.**